


Installation and Activation Steps: TV + VCR + DTA

1

Connect the DTA to the Cable Outlet


A

Locate the cable that currently runs from the cable wall outlet to the back of your VCR (or other recording device). Leave one end of the cable connected to the wall, but disconnect the other end from the back of your VCR.

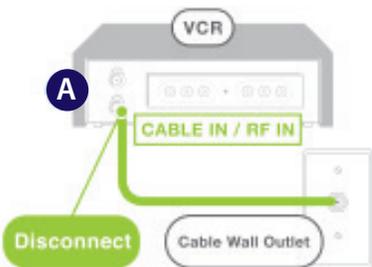

B

Reconnect this end of the cable to the "Cable In" input on the back of the DTA.

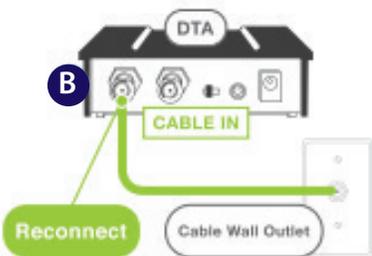



2

Connect the DTA to the VCR

A

Locate the cable that currently runs from the cable wall outlet to the back of your VCR (or other recording device). Leave one end of the cable connected to the wall, but disconnect the other end from the back of your VCR.

B
Connect the other end to the "Cable In/Rf In" input on the back of your VCR.

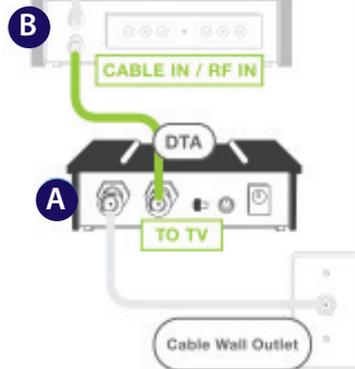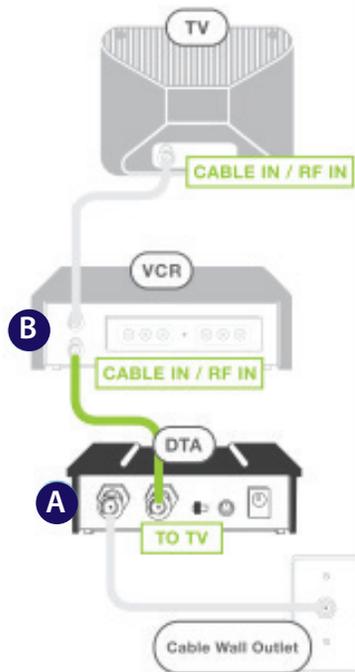

3


Power Up

A

Plug the round end of the power cord into the "Power" input on the back of the DTA.

B

Plug the other end into a live power outlet or surge protector.

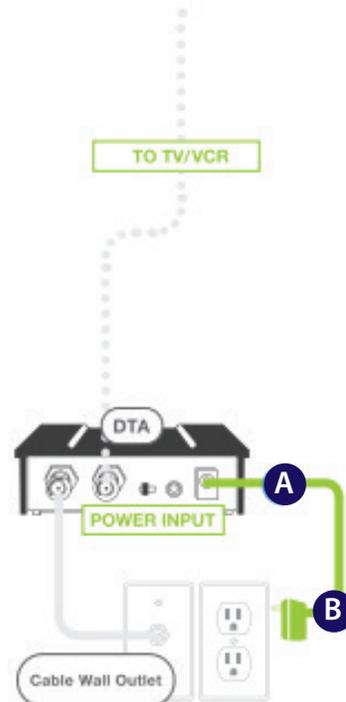

4

Set the Channel



A

Turn on your TV and tune it to channel 3.

B

Set the switch on the back of the DTA to channel 3.

Note: Some part of the country use channel 4. If you do not have a picture after completing the activation, you may need to switch both your TV and the DTA to channel 4.

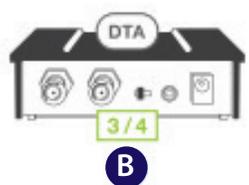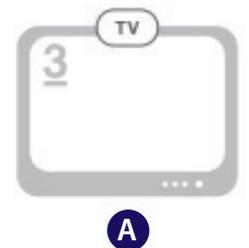

5

To schedule a recording with your VCR, program it to record channel 3 at the time the show is on; and make sure the channel they want to record is left on, on the DTA. The VCR will record whatever channel is on the DTA.