


KURV 2.0 VOICE REMOTE

Remote Pairing Operation

STB / Remote IR – RF Mode Conversion

For customers who wish to place the STB in a non-line of sight position (with respect to the remote control) the remote must operate in RF mode. As the remote operates in IR mode by default the user will have to convert the remote operation from IR mode to RF mode by the following sequence:

- While in the same room with the STB, press and hold **Set** on the remote for approximately 3 seconds. The remote LED will initially display red.
- After 3 seconds the remote LED will turn green. Immediately press the home button (.
- A 3-digit code will be displayed on the TV screen.
- Enter the 3-digit code shown on the TV.
- If successful, “Connected” will be displayed on the TV screen and the remote now operates via RF mode.

If “Connected” is not displayed, wait 3 minutes, then try the above procedure again.

Once successfully paired (Connected), the STB may be placed in a non-line of sight location such as behind the TV or in a cabinet.

To return the remote to the line of sight IR mode of operation perform the following steps:

- On the remote press and hold **Set** for 3 seconds, until the LED turns green.
- On the remote Press **9 8 1**.
- Successful completion is signaled by 2 green blinks.

TV / Remote Programming

By default, the remote controls the Volume on TV, and Power on the STB. To program the remote to the TV, such that remote Master Power key presses adjust Power and Volume on the TV by Infrared commands directly follow the instructions below:

- Press and hold the **Set** key until the remote LED turns green.
- Enter the 5-digit code as shown in **Appendix A**.
- Successful programming is indicated by two green blinks of the LED.
- Unsuccessful programming is indicated by two red blinks of the LED.



Audio System - Sound Bar / Remote Programming

By default, the remote controls the Volume on TV, and Power on the STB. To program the remote to the Sound Bar, such that remote Master Power key presses adjust Volume on the Sound Bar by Infrared commands directly, follow the instructions below:

- Press and hold the **Set** key until the remote LED turns green.
- Enter the 5-digit code as shown in **Appendix B**.
- Successful programming is indicated by two green blinks of the LED.
- Unsuccessful programming is indicated by two red blinks of the LED.


TV Code Auto-Search Method

If a code cannot be located in Appendix A or B, use this method to find control programming:


- Press and hold the **Set** key for 3 seconds, until the LED turns green.
- On the remote Press **9 9 1**.
- Press the **CH**  sequentially until the TV turns off.
- Press the **OK / SELECT**  key to enter this control into the remote.
- Successful programming is indicated by two green blinks of the LED.

Volume and Mute Controlling Device Link


By default, the remote controls the Volume and Mute on the TV or Sound Bar. To program the remote to control Volume and Mute on the STB, such that remote can adjust volume on the Sound Bar by Infrared commands directly, follow the instructions below:


- Press and hold the **Set** until the remote LED turns green.
- Press the **VOL**  key.
- Successful programming is indicated by two green blinks of the LED.
- Unsuccessful programming is indicated by two red blinks of the LED.

To return remote to default for Volume and Mute control on the TV or Sound Bar, follow the instructions below:

- Press and hold the **Set** key until the remote LED turns green.
- Press the **VOL**  key.
- Successful programming is indicated by two green blinks of the LED.
- Unsuccessful programming is indicated by two red blinks of the LED.

Remote Behavior

If the remote has been programmed to the TV and Audio Systems as described on the previous page, the remote's TV power button () will control the TV power only.

This will not affect the powered state of the STB. The "all devices" power button () will control the TV power as well as the STB and audio system power states if remote has been fully programmed with TV and Audio system.

The "all devices" power button () may be used in two ways while system is fully powered on:

Short Press: Will turn off TV and Audio sub-system and put the STB into a standby mode.

Long Press: User will be prompted if they want STB to be powered down (non-standby) mode. If OK is selected, the TV, Audio system, and STB will all be powered down. The STB will be fully powered down and not be in standby mode.

APPENDIX A

TV Codes for Remote Pairing

- Top 10 US TV Brands -

TV Maker / Brand	Code Number										
SAMSUNG	10305	10265	10001	10012	10051	10092	10011	10118	10124	10132	10145
	10176	10221	10306	10542	10315	10439	10479	10408	10543		
LG (GOLDSTAR)	10011	10093	10103	10113	10118	10132	10346	10315	10439		
SONY	10043	10075	10117	10130	10067	10170	10238	10247	10309	10409	10452
VIZIO	10011	10315	10351	10530							
PANASONIC	10076	10010	10038	10057	10005	10148	10150	10169	10308	10359	10485
SHARP	10260	10020	10025	10028	10033	10034	10132	10151	10235	10236	10361
	10375	10436	10011								
TOSHIBA	10021	10013	10035	10041	10052	10063	10092	10142	10146	10178	10179
	10393	10303	10464	10419	10517						
DYNEX	10091	10347	10366								
TCL	10256	10371	10267								
SKYWORTH	10522										

TV Maker / Brand	Code Number										
3M	10368										
A MARK	10103	10132	10388								
ACTION	10370										
ADMIRAL	10436	10431									
ADVENT	10135	10339									
ADVENTURA	10372										
AFTRON	10373										
AIKO	10374										
AIWA(R-44A)	10082	10183									
AKAI	10148	10160	10001	10317	10318	10348	10352	10542	10439	10476	10517
ALARON	10376										
ALBATRON	10377										
AMBASSADOR	10378										
AMERICA ACTION	10380										
AMPRO	10070	10164	10249	10381							
AMSTRAD	10053										
ANAM	10045	10055	10057	10076	10095	10099	10103	10109	10112	10143	10380
AOC	10088	10363	10367	10001	10011	10103	10330	10439			
AOMNI	10354										
APEX	10302	10303	10282								

TV Maker / Brand	Code Number											
APEX DIGITAL	10303	10373	10384									
ARCHER	10388											
ASTAR	10390											
AUDIOVOX	10345	10319	10380	10374	10388							
AURORA SYSTEMS	10391											
AVENTURA	10311											
BELCOR	10001	10011	10315									
BELL & HOWELL	10393											
BENQ	10395	10396										
BLAUPUNKT	10084											
BLU: SENS	10476	10455	10499									
BRADFORD	10380											
BRILLIAN	10398											
BROCKWOOD	10011	10315										
BROKSONIC	10143	10166	10174	10431								
BUSH	10399											
BYD: SIGN	10400											
CANDLE	10001	10002	10003	10011	10439	10372	10543					
CANON	10402	10403										
CAPEHART	10059											
CARNIBALE	10001	10439										
CARVER	10415	10405										
CASIO	10406	10407										
CCE	10408											
CELEBRITY	10409											
CELERA	10303											
CETRONIC	10045											
CHANGHONG	10303											
CITIZEN	10001	10002	10003	10011	10045	10092	10094	10132	10439	10374	10372	
		10543	10517									
CLARION	10380											
CLASSIC	10045											
COBY	10412	10011	10275									
COMMERCIAL SOLUTIONS	10413											
COMPAQ	10414											
CONCERTO	10011	10543										
CONTEC	10041	10045	10051	10052	10380							
CORENA SYSTEM	10301											
CORONADO	10132											
CRAIG	10045	10055	10157	10049	10159	10380	10258					

TV Maker / Brand	Code Number											
CROSLLEY	10415											
CROWN	10045	10132	10380									
CURTIS MATHES	10001	10092	10011	10132	10365	10413	10415	10393	10319	10436	10542	
	10439	10368	10504	10543	10271							
CXC	10045	10380										
CYBERHOME	10416											
CYTRON	10417	10418										
DAEWOO	10011	10022	10023	10038	10045	10046	10056	10068	10073	10094	10098	
	10102	10105	10108	10111	10114	10116	10118	10119	10127	10132		
	10246	10319	10374	10315	10188							
DAYTRON	10011	10132	10315									
DELL	10148	10314										
DELTA	10419											
DENON	10368	10421										
DIAMOND VISION	10422	10423										
DIGI LINK	10172											
DIGISTAR	10424											
DIGITAL LIFESTYLES	10425	10426										
DIGITAL PROJECTION INC.	10427	10429										
DREAM VISION	10430											
DUMONT	10011											
DURABRAND	10431	10380	10315	10311	10434	10388	10435					
DWIN	10436											
DYNASTY	10045											
DYNATECH	10063											
DYNEX	10091	10347	10366									
EIKI	10253	10402										
ELECTROGRAPH	10354											
ELECTROHOME	10074	10132	10431									
ELECTROBAND	10409											
ELECTROGRAPH	10486	10354										
ELEMENT	10335	10259	10273	10283								
EMERSON	10001	10012	10013	10029	10033	10045	10048	10049	10051	10052	10091	
	10011	10132	10137	10139	10141	10157	10140	10184	10185	10186	10187	
	10188	10190	10192	10193	10194	10195	10196	10197	10198	10199	10200	
	10201	10202	10355	10393	10319	10431	10380	10315	10311	10505		
EMPREX	10425											
ENVISION	10439	10358	10330									
ENVIXION	10001											
EPSON	10364											

TV Maker / Brand	Code Number										
ERAE	10442										
ESA	10317	10318	10311								
FISHER	10013	10058	10393								
FUJITSU	10149	10228	10333	10334	10376						
FUNAI	10033	10045	10380	10311	10376	10452					
FUTURETECH	10045	10380									
GATEWAY	10310	10486									
GE	10001	10014	10015	10038	10057	10070	10083	10011	10121	10133	10141
	10145	10413	10319	10315	10489	10484					
GILBRALTER	10001	10011	10439	10315							
GO VIDEO	10443	10479	10476								
GOODMANS	10445										
GPX	10276										
GRADIENTE	10040										
GRUNDIG	10288	10289									
GRUNPY	10380	10376									
GVA	10278										
H & B	10301										
HAIER	10026	10322	10323	10324	10325	10326	10434	10373	10067		
HALL MARK	10011	10315									
HANNS.G	10447										
HANNSPREE	10448	10449	10447	10263	10264						
HARLEY DAVIDSON	10451	10376	10452								
HARMAN KARDON	10034	10180	10181	10415							
HARVARD	10380	10453									
HAVERMY	10436										
HELIOS	10301										
HELLO KITTY	10319										
HEWLETT PACKARD	10456	10330	10458								
HISENSE	10266	10011	10279	10280	10373	10459	10462				
HITACHI	10017	10011	10015	10016	10001	10018	10029	10043	10072	10132	10144
	10147	10203	10204	10206	10207	10208	10210	10211	10368	10452	10543
HP	10357										
HUMAX	10143										
HYPERION	10011										
HYUNDAI	10460	10461									
I-INC	10463										
ILO	10091	10343	10362	10356							
INFINITY	10415	10148									
INFOCUS	10464	10364	10466	10467							

TV Maker / Brand	Code Number											
INITIAL	10356											
INKEL	10120											
INSIGNIA	10091	10366	10311	10417	10274							
JBL	10148	10415										
JCPENNY	10001	10011	10014	10015	10030	10035	10092	10132	10145			
JENSEN	10019	10234										
JVC	10261	10270	10038	10040	10079	10239	10550					
KAWASHO	10470											
KDS	10335											
KEC	10045	10380										
KENWOOD	10001	10229	10011	10439	10315							
KLEGG	10354											
KLH	10341	10303										
KLOSS	10002	10060	10001	10372								
KMC	10132											
KNOLL SYSTEMS	10467											
KONKA	10473	10475	10476	10477								
KOST	10478	10479										
KREISEN	10480	10479										
KT	10001	10045	10132	10140	10308							
KTV	10380	10439										
LG (GOLDSTAR)	10011	10093	10103	10113	10118	10132	10346	10315	10439			
LLOYD'S	10452											
LODGENET	10069											
LOEWE	10481											
LOGIK	10069											
LUCE	10358	10483										
LUXMAN	10011	10543										
LXI	10013	10021	10053	10034	10145	10148	10413	10415	10393	10303	10315	
MAGNASONIC	10001	10011	10348									
MAGNAVOX	10001	10003	10011	10060	10061	10062	10064	10065	10066	10086	10088	
	10118	10132	10145	10148	10192	10212	10236	10244	10312	10332	10415	
	10439	10356	10505	10452	10330	10376	10126					
MAGNIN	10484											
MARANTZ	10001	10074	10148	10415	10439							
MATSUI	10148											
MATSUSHITA	10485											
MAXENT	10486	10487										
MB QUART	10315											
MEGATRON	10315	10368	10388	10435								

TV Maker / Brand	Code Number										
MEMOREX	10013	10069	10091	10011	10393	10431	10315	10376	10516		
METZ	10084										
MGA	10001	10011	10033	10044	10050	10074	10315	10439	10484		
MIDLAND	10413										
MINERVA	10084										
MINTEK	10356										
MITSUBISHI	10216	10011	10030	10033	10034	10041	10044	10089	10115	10160	10167
	10168	10214	10001	10245	10436	10315					
MONIVISION	10377										
MONTGOMERY WARD	10185	10217	10218	10219	10220						
MOTOROLA	10436	10335									
MOXELL	10335										
MTC	10001	10011	10439	10315	10543						
MULTITECH	10380										
NAD	10021	10031	10303	10315	10543						
NAKAMICHI	10491										
NAXA	10492										
NEC	10001	10013	10022	10025	10030	10041	10057	10121	10125	10011	10235
	10439	10315	10543	10405							
NETTV	10486										
NIKEI	10045										
NIKKO	10001	10315	10439	10374							
NIKO	10493										
NOBLEX	10494										
NORCENT	10373	10330	10495	10493							
NORWOOD MICRO	10362	10498									
NTC	10374										
NUVISION	10502										
OLEVIA	10011	10342	10535	10315							
OLYMPUS	10503										
ONWA	10045	10380									
OPTONICA	10025	10034	10235								
OPTIMUS	10485	10393	10504	10505							
OPTOMA	10506	10448									
OPTONICA	10436										
ORION	10431	10376	10516								
PANASONIC	10076	10010	10038	10057	10005	10148	10150	10169	10308	10359	10485
PENNEY	10001	10011	10413	10303	10315	10439	10484	10489	10388		
PHILCO	10001	10003	10011	10030	10045	10057	10060	10061	10064	10065	10118
	10132	10148	10415	10439	10315						

TV Maker / Brand	Code Number										
PHILIPS	10148	10321	10011	10040	10060	10067	10132	10145	10001	10222	10003
	10371	10415	10479								
PILOT	10001	10011	10439	10315							
PIONEER	10504	10024	10029	10031	10032	10011	10248	10254	10304	10001	
POLAROID	10335	10338	10339	10340	10341	10303	10417	10362	10478	10301	10476
PORTLAND	10011	10132	10374	10315	10335	10424	10476				
PROSCAN	10133	10249	10413	10262	10257	10268	10067	10269			
PROTON	10059	10011	10103	10132	10165	10251	10315	10388			
PROTRON	10507	10508									
PROVIEW	10335										
PULSAR	10011	10315									
PUNEET	10425										
PVISION	10442										
QUASAR	10038	10057	10243	10308	10485						
RADIO SHACK	10025	10045	10048	10011	10118	10132	10001	10235			
RCA	10001	10004	10006	10011	10029	10030	10057	10083	10133	10145	10161
	10171	10232	10371	10413	10484	10315	10256	10272			
REALISTIC	10013	10025	10045	10048	10001	10011	10235	10393	10380	10315	10439
	10543										
REVOLUTION HD	10354										
ROCTEC	10237										
RUNCO	10152	10153	10001	10250	10252	10336	10337	10439			
SAMPO	10001	10059	10011	10486	10439						
SAMSUNG	10305	10265	10001	10012	10051	10092	10011	10118	10124	10132	10145
	10176	10221	10306	10542	10315	10439	10479	10408	10543		
SANSUI	10431	10452	10516	10517							
SANYO	10013	10026	10027	10037	10041	10054	10058	10078	10253	10393	10402
	10484										
SCEPTRE	10313	10067									
SCIMITSU	10011	10315									
SCOTT	10033	10045	10049	10011	10132	10380	10315	10376			
SCOTCH	10315										
SEARS	10011	10013	10021	10033	10035	10058	10078	10092	10132	10145	10244
	10413	10415	10393	10303	10315	10311	10543	10376	10452		
SEIKI	10259	10283	10284	10285	10286	10287					
SELECO	10368	10430									
SHARP	10260	10020	10025	10028	10033	10034	10132	10151	10235	10236	10361
	10375	10436	10011								
SHARPER IMAGE	10518										
SHERWOOD	10120										
SHOGUN	10011	10315									

TV Maker / Brand	Code Number											
SIEMENS	10084											
SIGNATURE	10069	10011										
SIGNATURE 2000	10011											
SIGNET	10519	10478	10520									
SIM2 MULTIMEDIA	10430											
SIMPSON	10001											
SKYWORTH	10522											
SOLARISM	10523											
SOLE	10358	10483	10301	10479	10354							
SONY	10043	10075	10117	10130	10067	10170	10238	10247	10309	10409	10452	
SOUNDESIGN	10003	10033	10045	10011	10380	10315	10376					
SOVA	10507											
SOYO	10425	10463	10524	10525	10476							
SPECTRICON	10103	10011	10388									
SPECTRONIQ	10335											
SQUAREVIEW	10311											
SSS	10011	10045	10380	10315								
STARLITE	10011	10380										
STUDIO EXPERIENCE	10377											
SUNBRITE	10528	10529										
SUPERSCAN	10436	10530										
SUPRE MACY	10002	10372										
SUPREME	10409											
SVA	10373	10479	10301	10532	10533							
SYLVANIA	10001	10003	10008	10011	10060	10061	10064	10118	10126	10065	10145	
	10148	10155	10311	10355	10415	10439						
SYMPHONIC	10380	10311	10452	10505								
SYNTAX	10342	10535	10315									
TANDY	10034	10436										
TASHIKO	10537											
TATUNG	10057	10063	10388	10458	10362							
TCL	10256	10371	10267									
TEAC	10379	10281										
TECHNICS	10080	10076	10485									
TECHNOL ACE	10376											
TECHVIEW	10539	10541										
TECHWOOD	10011	10388	10543									
TELEMAGIC	10402											
TEKNIKA	10001	10002	10003	10011	10030	10033	10036	10045	10069	10074	10092	
	10094	10132	10415	10380	10374	10315	10543	10376				
TELEFUNKEN	10039	10047	10241	10242	10542	10543	10544					

TV Maker / Brand	Code Number											
TELERENT	10069											
TERA	10156											
THOMAS	10452											
TMK	10011	10315	10543	10378								
TOSHIBA	10021	10013	10035	10041	10052	10063	10092	10142	10146	10178	10179	
	10393	10303	10464	10419	10517							
TOTEVISION	10132											
TRUTECH	10353											
TVS	10431											
ULTRA	10547	10508										
UNIVERSAL	10014	10015										
UPSTAR	10277											
US LOGIC	10362											
VECTOR RESEARCH	10001	10439										
VENTURER	10315											
VICTOR	10550											
VIDEO CONCEPTS	10160											
VIDIKRON	10255	10415										
VIDTECH	10011	10315										
VIEWSONIC	10363	10088	10330	10331	10349	10486	10530	10503				
VIKING	10372											
VIORE	10316											
VISART	10551											
VITO	10360											
VIZIO	10011	10315	10351	10530								
WARDS	10011	10014	10015	10025	10033	10061	10062	10064	10065	10069	10071	
	10132	10148	10001	10235	10415	10315	10439	10489	10543	10376		
WAYCON	10303											
WHITE WESTING HOUSE	10091	10319	10320	10327	10328	10329	10067	10431	10409			
WINBOOK	10362											
WOORYOUNG	10307											
WYSE	10330											
XOCECO	10552											
YAMAHA	10001	10011	10439	10315								
YORK	10011											
ZENITH	10009	10069	10070	10090	10094	10431	10315	10374	10452	10516		
ZONDA	10103	10388										

APPENDIX B

Audio System Codes for Remote Pairing

Audio Maker / Brand	Code Number											
ADCOM	20088	20098	20218	20147	20233							
AIWA	20142	20182	20025	20141	20022	20110						
AKAI	20128											
ANAM	20026	20188	20189									
ANTHEM	20004											
B&K	20102	20103										
BOSE	20007	20185	20131									
CARVER	20253	20013	20037	20060	20068	20148	20221	20226	20245	20250	20015	
CLARION	20132											
COBY	20010	20017										
DENON	20041	20234	20111	20149	20150	20152	20232	20003				
ENLIGHTENED	20105											
EVERQUEST	20032											
FISHER	20037	20015	20083	20207								
FOSGATE AUDIONIC	20153											
HAIER	20019	20023										
HARMAN KARDON	20205	20208	20153	20228	20229	20249						
HITACHI	20035	20040	20027	20202								
ILIVE	20049	20050										
INKEL	20012											
INSIGNIA	20061											
JCPENNY	20016	20108										
JENSEN	20065											
JVC	20112											
KENWOOD	20012	20206	20231	20033	20015	20211	20212	20213	20214	20215	20222	
	20230	20134	20246									
LEXICON	20125	20156	20158	20159								
LG (GOLDSTAR)	20069	20077	20018	20192								
LOTTE	20191	20193										

Audio Maker / Brand	Code Number											
LUXMAM	20042											
LXI	20084											
MAGNAVOX	20013	20092										
MARANTZ	20013	20093	20047	20072	20063	20203	20221	20250				
MAXELL	20078											
MCINTOSH	20160											
MCS	20016											
MITSUBISHI	20164	20165										
NAD	20036											
NAKAMICHI	20167	20047										
NILES	20168											
ONKYO	20178	20053	20113	20114	20024	20177	20179	20223	20224	20251		
OPTIMUS	20029	20033	20048									
OUTLAW	20183											
PANASONIC	20126	20014	20039	20094	20194	20200						
PARASOUND	20254											
PHILIPS	20009	20301	20302	20303	20093	20013	20172	20124				
PIONEER	20082	20021	20046	20051	20057	20073	20076	20096	20001	20054	20237	
	20238	20239	20240	20241	20242	20243	20244					
PROCEED	20006	20248	20252									
QUASAR	20014	20094										
RCA	20062	20106	20120	20138	20056	20123						
REALISTIC	20011	20030	20084	20002	20026	20101						
ROTEL	20089	20080	20091									
SAMSUNG	20304	20197	20198	20199	20306							
SANSUI	20116	20013	20124	20047								
SANYO	20187											
SCOTT	20026	20097										
SHARP	20139	20058	20033	20100	20132	20133	20134	20127				
SHERWOOD	20045	20031	20247									
SONY	20008	20176	20005	20025	20107	20145	20090	20170	20195	20209	20216	
	20305											
SOUNDESIGN	20043											
SSI	20075											

Audio Maker / Brand	Code Number										
	20128	20186	20195								
TAEKWANG	20128	20186	20195								
TEAC	20066	20067	20026	20190							
TECHNICS	20126	20094	20109	20014	20137						
THOMSON	20217										
TOSHIBA	20155	20118	20237	20255							
VICTOR	20020	20112									
VIZIO	20180										
WARDS	20015										
YAMAHA	20140	20166	20201	20028	20033	20038	20074	20132	20175	20204	20210
	20219	20220	20227	20235	20236						
ZANTEK	20174										